


Instructions For Use

EZ7™

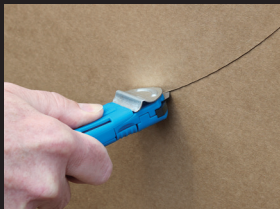


Spring back safety guard for safe top cuts



Blade extension button for convenient tray cuts



Blade-less tape splitting eliminates cut injuries

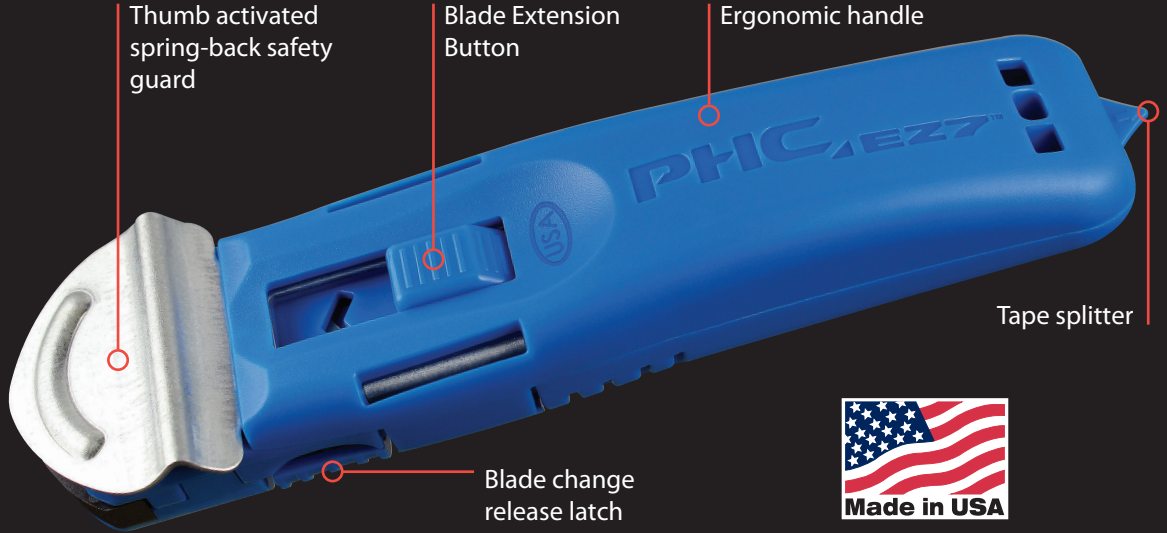


EZ7™ Guarded Spring-Back Safety Cutter

AMBIDEXTROUS - For Right & Left Handed Users




BLADE DEPTH SETTINGS
On the backside of EZ7 Safety Cutter push blade depth button down and slide forward to the next notch to advance blade depth. In the photo on the left, the blade is in the locked position.


Blade Change

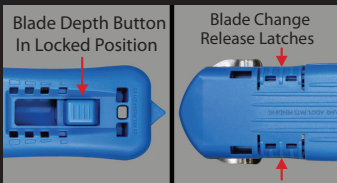


With the Blade Depth button in the locked position, push in and lift both Blade Change Release latches at the same time to open the blade compartment.

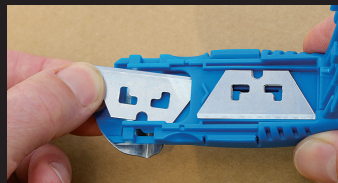

Remove used blade from blade retainer and dispose of safely.

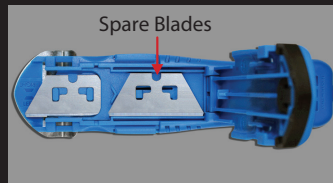

Remove spare blade from blade compartment. Use only S Series replacement blades: #SP-017, SPD-017 or PBDSP017B.

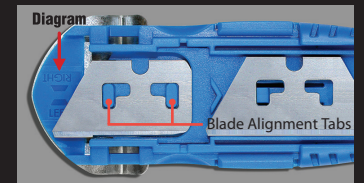

Place new blade onto blade retainer, aligning blade notches with alignment tabs. Follow blade diagram on cutter (see arrow above) for left or right hand blade orientation. Close cutter.



UKH-324
Safety Holster
Available

